


 




TV 15 → 22"  
38 → 56cm





MAX 15kg/33lbs

<b>A1</b>	 M5	X4	<b>D</b>	 X1
<b>A2</b>	 M4		<b>E</b>	 X1
<b>B</b>				
<b>C</b>				

## 1. FIX TO WALL

### IMPORTANT

For solid walls use suitable wallplugs and correct sizes drilled holes.  
DO NOT mount onto plasterboard or paneled walls unless all four screws are fixed into wooden batten/stud.  
If you have any doubts regarding installation consult a qualified contractor.

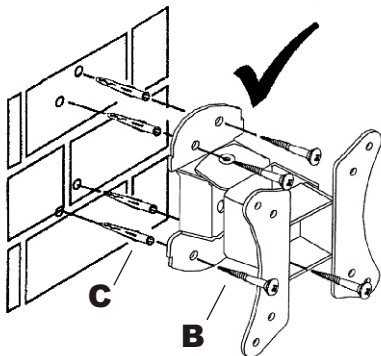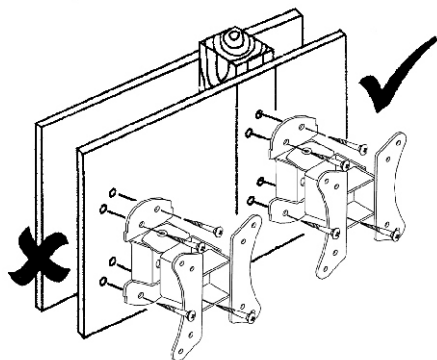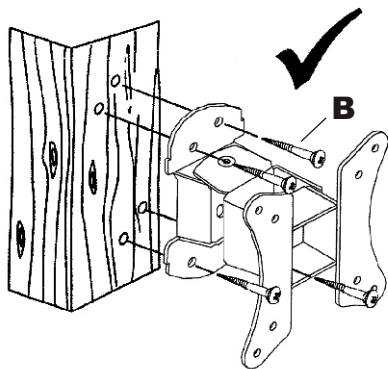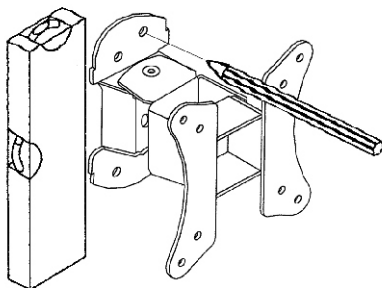

## 2. FIT SCREEN



**D**



**A1**




**A2**

Attach the LCD mount to the bracket using the four M5 or M4 Allen screws provided  
**NOTE!**


The standard fixing plate suits VESA 75mm and 100mm fixing centres

## IMPORTANT

IF YOU NEED TO REMOVE THE BASE FROM THE LCD MOUNT FOLLOW THE MANUFACTURER'S INSTRUCTIONS.

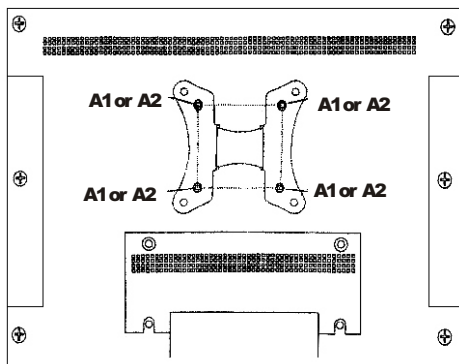

BACK VIEW OF LCD TV  
(75mm CENTRES SHOWN)

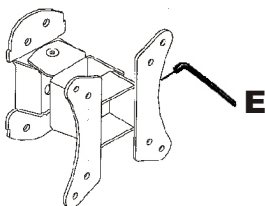

### NOTE

The allen keys provided E are so you can set your desired angle of tilt.